



# Certificate of Analysis

## COMPLIANCE FOR RETAIL

**Sample:** DA30321002-003  
**Harvest/Lot ID:** 2934 4046 7389 4006  
**Batch#:** 2934 4046 7389 4006  
**Cultivation Facility:** Tampa Cultivation  
**Processing Facility:** Tampa Processing  
**Distributor Facility:**  
**Source Facility:** Tampa Cultivation  
**Seed to Sale#** 1756 9916 2810 9595  
**Batch Date:** 02/14/23  
**Sample Size Received:** 15.3 gram  
**Total Amount:** 1357 units  
**Retail Product Size:** 0.3 gram  
**Ordered:** 03/20/23  
**Sampled:** 03/20/23  
**Completed:** 03/23/23  
**Sampling Method:** SOP.T.20.010








Mar 23, 2023 | FLUENT

82 NE 26th street  
 Miami, FL, 33137, US




# PASSED

Pages 1 of 6

PRODUCT IMAGE	SAFETY RESULTS								MISC.
									
	Pesticides <b>PASSED</b>	Heavy Metals <b>PASSED</b>	Microbials <b>PASSED</b>	Mycotoxins <b>PASSED</b>	Residuals Solvents <b>PASSED</b>	FiltH <b>PASSED</b>	Water Activity <b>PASSED</b>	Moisture <b>NOT TESTED</b>	Terpenes <b>TESTED</b>

	<b>Cannabinoid</b>	<b>PASSED</b>
--	--------------------	---------------

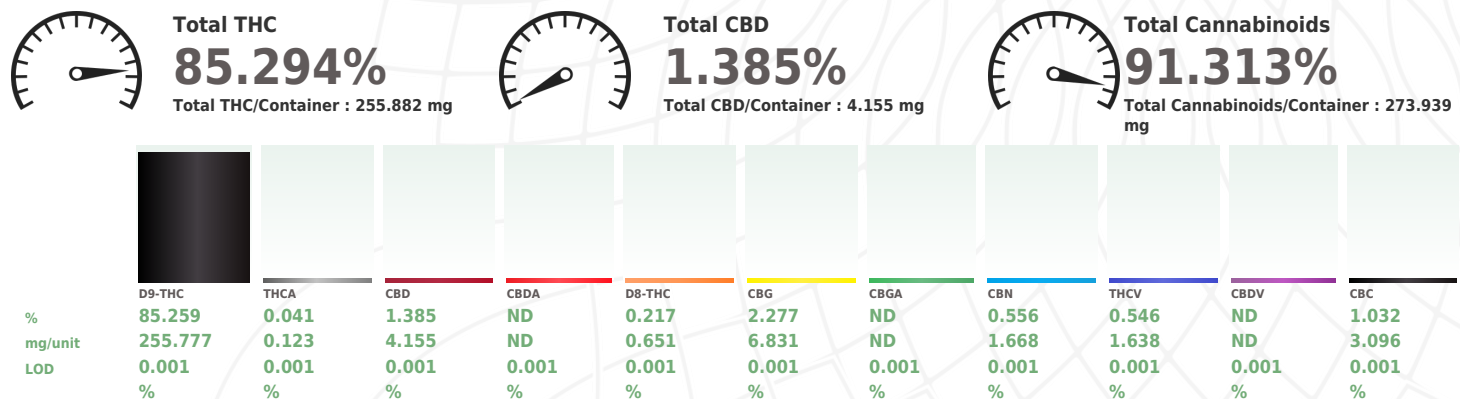

Analyzed by: 1665, 585, 1440      Weight: 0.1163g      Extraction date: 03/21/23 11:25:19      Extracted by: 1665

Analysis Method : SOP.T.40.031, SOP.T.30.031  
 Analytical Batch : DA057619POT  
 Instrument Used : DA-LC-007  
 Running on : 03/21/23 11:40:28  
 Reviewed On : 03/22/23 09:09:37  
 Batch Date : 03/21/23 08:53:01

Dilution : 400  
 Reagent : 031323.R08; 121321.34; 031323.R06  
 Consumables : 280670723; CE0123; 61633-125C6-125E; R1KB14270  
 Pipette : DA-079; DA-108; DA-078

Full Spectrum cannabinoid analysis utilizing High Performance Liquid Chromatography with UV detection in accordance with F.S. Rule 64ER20-39.



# Certificate of Analysis

**PASSED**

FLUENT

82 NE 26th street  
Miami, FL, 33137, US  
Telephone: (305) 900-6266  
Email: Taylor.Jones@getfluent.com

Sample : DA30321002-003  
Harvest/Lot ID: 2934 4046 7389 4006

Batch# : 2934 4046 7389 4006  
Sample Size Received : 15.3 gram  
Total Amount : 1357 units  
Sampled : 03/20/23  
Completed : 03/23/23 Expires: 03/23/24  
Ordered : 03/20/23  
Sample Method : SOP.T.20.010

Page 2 of 6

Terpenes

TESTED

Terpenes	LOD (%)	mg/unit	%	Result (%)	Terpenes	LOD (%)	mg/unit	%	Result (%)
TOTAL TERPENES	0.007	5.883	1.961		FARNESENE		ND	ND	
TOTAL TERPENEOL	0.007	ND	ND		ALPHA-HUMULENE	0.007	0.267	0.089	
ALPHA-BISABOLOL	0.007	0.159	0.053		VALENCENE	0.007	0.423	0.141	
ALPHA-PINENE	0.007	0.777	0.259		CIS-NEROLIDOL	0.007	ND	ND	
CAMPHENE	0.007	ND	ND		TRANS-NEROLIDOL	0.007	ND	ND	
SABINENE	0.007	ND	ND		CARYOPHYLLENE OXIDE	0.007	0.162	0.054	
BETA-PINENE	0.007	0.162	0.054		GUAIOL	0.007	ND	ND	
BETA-MYRCENE	0.007	1.743	0.581		CEDROL	0.007	ND	ND	
ALPHA-PHELLANDRENE	0.007	0.267	0.089		<div>Analysis by: 2076, 585, 1440Weight: 0.913gExtraction date: 03/21/23 12:26:31Extracted by: 2076</div> <div>Analysis Method : SOP.T.30.061A.FL, SOP.T.40.061A.FL</div> <div>Analytical Batch : DA057635TER</div> <div>Instrument Used : DA-GCMS-004</div> <div>Running on : 03/22/23 09:00:01</div> <div>Dilution : 10</div> <div>Reagent : 121622.26</div> <div>Consumables : 210414634; MKCN9995; CE0123; R1KB14270</div> <div>Pipette : N/A</div> <div>Terpenoid testing is performed utilizing Gas Chromatography Mass Spectrometry. For all Flower samples, the Total Terpenes % is dry-weight corrected.</div>				
3-CARENE	0.007	ND	ND						
ALPHA-TERPINENE	0.007	ND	ND			Reviewed On : 03/23/23 09:33:32 Batch Date : 03/21/23 09:33:55			
LIMONENE	0.007	0.399	0.133						
EUCALYPTOL	0.007	ND	ND						
OCIMENE	0.007	0.162	0.054						
GAMMA-TERPINENE	0.007	ND	ND						
SABINENE HYDRATE	0.007	ND	ND						
TERPINOLENE	0.007	ND	ND						
FENCHONE	0.007	ND	ND						
LINALOOL	0.007	0.357	0.119						
FENCHYL ALCOHOL	0.007	ND	ND						
ISOPULEGOL	0.007	ND	ND						
CAMPHOR	0.013	ND	ND						
ISOBORNEOL	0.007	ND	ND						
BORNEOL	0.013	ND	ND						
HEXAHYDROTHYMOL	0.007	ND	ND						
NEROL	0.007	ND	ND						
PULEGONE	0.007	ND	ND						
GERANIOL	0.007	ND	ND						
GERANYL ACETATE	0.007	ND	ND						
ALPHA-CEDRENE	0.007	ND	ND						
BETA-CARYOPHYLLENE	0.007	1.005	0.335						
Total (%)			1.961						



# Certificate of Analysis

**PASSED**

FLUENT

 82 NE 26th street  
 Miami, FL, 33137, US  
 Telephone: (305) 900-6266  
 Email: Taylor.Jones@getfluent.com

Sample : DA30321002-003

Harvest/Lot ID: 2934 4046 7389 4006

 Batch# : 2934 4046 7389  
 4006

Sampled : 03/20/23

Ordered : 03/20/23


Sample Size Received : 15.3 gram

Total Amount : 1357 units

Completed : 03/23/23 Expires: 03/23/24

Sample Method : SOP.T.20.010

Page 3 of 6

<div><div></div><div>Pesticides</div></div>						PASSED					
Pesticide	LOD	Units	Action Level	Pass/Fail	Result	Pesticide	LOD	Units	Action Level	Pass/Fail	Result
TOTAL CONTAMINANT LOAD (PESTICIDES)	0.01	ppm	5	PASS	ND	OXAMYL	0.01	ppm	0.5	PASS	ND
TOTAL DIMETHOMORPH	0.01	ppm	0.2	PASS	ND	PACLOBUTRAZOL	0.01	ppm	0.1	PASS	ND
TOTAL PERMETHRIN	0.01	ppm	0.1	PASS	ND	PHOSMET	0.01	ppm	0.1	PASS	ND
TOTAL PYRETHRINS	0.01	ppm	0.5	PASS	ND	PIPERONYL BUTOXIDE	0.01	ppm	3	PASS	ND
TOTAL SPINETORAM	0.01	ppm	0.2	PASS	ND	PRALLETHRIN	0.01	ppm	0.1	PASS	ND
TOTAL SPINOSAD	0.01	ppm	0.1	PASS	ND	PROPICONAZOLE	0.01	ppm	0.1	PASS	ND
ABAMECTIN B1A	0.01	ppm	0.1	PASS	ND	PROPOXUR	0.01	ppm	0.1	PASS	ND
ACEPHATE	0.01	ppm	0.1	PASS	ND	PYRIDABEN	0.01	ppm	0.2	PASS	ND
ACEQUINOCYL	0.01	ppm	0.1	PASS	ND	SPIROMESIFEN	0.01	ppm	0.1	PASS	ND
ACETAMIPRID	0.01	ppm	0.1	PASS	ND	SPIROTETRAMAT	0.01	ppm	0.1	PASS	ND
ALDICARB	0.01	ppm	0.1	PASS	ND	SPIROXAMINE	0.01	ppm	0.1	PASS	ND
AZOXYSTROBIN	0.01	ppm	0.1	PASS	ND	TEBUCONAZOLE	0.01	ppm	0.1	PASS	ND
BIFENAZATE	0.01	ppm	0.1	PASS	ND	THIACLOPRID	0.01	ppm	0.1	PASS	ND
BIFENTHRIN	0.01	ppm	0.1	PASS	ND	THIAMETHOXAM	0.01	ppm	0.5	PASS	ND
BOSCALID	0.01	ppm	0.1	PASS	ND	TRIFLOXYSTROBIN	0.01	ppm	0.1	PASS	ND
CARBARYL	0.01	ppm	0.5	PASS	ND	PENTACHLORONITROBENZENE (PCNB) *	0.01	PPM	0.15	PASS	ND
CARBOFURAN	0.01	ppm	0.1	PASS	ND	PARATHION-METHYL *	0.01	PPM	0.1	PASS	ND
CHLORANTRANILIPROLE	0.01	ppm	1	PASS	ND	CAPTAN *	0.07	PPM	0.7	PASS	ND
CHLORMEQUAT CHLORIDE	0.01	ppm	1	PASS	ND	CHLORDANE *	0.01	PPM	0.1	PASS	ND
CHLORPYRIFOS	0.01	ppm	0.1	PASS	ND	CHLORFENAPYR *	0.01	PPM	0.1	PASS	ND
CLOFENTEZINE	0.01	ppm	0.2	PASS	ND	CYFLUTHRIN *	0.05	PPM	0.5	PASS	ND
COUMAPHOS	0.01	ppm	0.1	PASS	ND	CYPERMETHRIN *	0.05	PPM	0.5	PASS	ND
DAMINOZIDE	0.01	ppm	0.1	PASS	ND	<div>Analyzed by: 3379, 585, 1440Weight: 0.2659gExtraction date: 03/21/23 13:29:30Extracted by: 3379</div> <div>Analysis Method : SOP.T.30.101.FL (Gainesville), SOP.T.30.102.FL (Davie), SOP.T.40.101.FL (Gainesville), SOP.T.40.102.FL (Davie)</div> <div>Analytical Batch : DA057627PESReviewed On : 03/22/23 10:23:36</div> <div>Instrument Used : DA-LCMS-003 (PES)Batch Date : 03/21/23 09:22:07</div> <div>Running on : 03/21/23 13:32:23</div> <div>Dilution : 250</div> <div>Reagent : 032023.R01; 032023.R03; 032023.R08; 032023.R04; 022123.R33; 031523.R01; 040521.11</div> <div>Consumables : 6697075-02</div> <div>Pipette : DA-093; DA-094; DA-219</div> <div>Testing for agricultural agents is performed utilizing Liquid Chromatography Triple-Quadrupole Mass Spectrometry in accordance with F.S. Rule 64ER20-39.</div>					
DIAZINON	0.01	ppm	0.1	PASS	ND						
DICHLORVOS	0.01	ppm	0.1	PASS	ND						
DIMETHOATE	0.01	ppm	0.1	PASS	ND						
ETHOPROPHOS	0.01	ppm	0.1	PASS	ND						
ETOFENPROX	0.01	ppm	0.1	PASS	ND						
ETOXAZOLE	0.01	ppm	0.1	PASS	ND						
FENHEXAMID	0.01	ppm	0.1	PASS	ND						
FENOXYCARB	0.01	ppm	0.1	PASS	ND						
FENPYROXIMATE	0.01	ppm	0.1	PASS	ND						
FIPRONIL	0.01	ppm	0.1	PASS	ND						
FLONICAMID	0.01	ppm	0.1	PASS	ND						
FLUDIOXONIL	0.01	ppm	0.1	PASS	ND						
HEXYTHIAZOX	0.01	ppm	0.1	PASS	ND						
IMAZALIL	0.01	ppm	0.1	PASS	ND						
IMIDACLOPRID	0.01	ppm	0.4	PASS	ND						
KRESOXIM-METHYL	0.01	ppm	0.1	PASS	ND						
MALATHION	0.01	ppm	0.2	PASS	ND						
METALAXYL	0.01	ppm	0.1	PASS	ND						
METHIOCARB	0.01	ppm	0.1	PASS	ND						
METHOMYL	0.01	ppm	0.1	PASS	ND						
MEVINPHOS	0.01	ppm	0.1	PASS	ND						
MYCLOBUTANIL	0.01	ppm	0.1	PASS	ND						
NALED	0.01	ppm	0.25	PASS	ND						





# Certificate of Analysis

**PASSED**
**FLUENT**

 82 NE 26th street  
 Miami, FL, 33137, US  
**Telephone:** (305) 900-6266  
**Email:** Taylor.Jones@getfluent.com

**Sample :** DA30321002-003

**Harvest/Lot ID:** 2934 4046 7389 4006

**Batch# :** 2934 4046 7389 4006

**Sampled :** 03/20/23

**Ordered :** 03/20/23

**Sample Size Received :** 15.3 gram

**Total Amount :** 1357 units

**Completed :** 03/23/23 **Expires:** 03/23/24

**Sample Method :** SOP.T.20.010

Page 4 of 6



## Residual Solvents

**PASSED**

Solvents	LOD	Units	Action Level	Pass/Fail	Result
1,1-DICHLOROETHENE	0.8	ppm	8	PASS	ND
1,2-DICHLOROETHANE	0.2	ppm	2	PASS	ND
2-PROPANOL	50	ppm	500	PASS	ND
ACETONE	75	ppm	750	PASS	ND
ACETONITRILE	6	ppm	60	PASS	ND
BENZENE	0.1	ppm	1	PASS	ND
BUTANES (N-BUTANE)	500	ppm	5000	PASS	ND
CHLOROFORM	0.2	ppm	2	PASS	ND
DICHLOROMETHANE	12.5	ppm	125	PASS	ND
ETHANOL	500	ppm	5000	PASS	ND
ETHYL ACETATE	40	ppm	400	PASS	ND
ETHYL ETHER	50	ppm	500	PASS	ND
ETHYLENE OXIDE	0.5	ppm	5	PASS	ND
HEPTANE	500	ppm	5000	PASS	ND
METHANOL	25	ppm	250	PASS	ND
N-HEXANE	25	ppm	250	PASS	ND
PENTANES (N-PENTANE)	75	ppm	750	PASS	ND
PROPANE	500	ppm	5000	PASS	ND
TOLUENE	15	ppm	150	PASS	ND
TOTAL XYLENES	15	ppm	150	PASS	ND
TRICHLOROETHYLENE	2.5	ppm	25	PASS	ND

**Analyzed by:**  
 850, 585, 1440

**Weight:**  
 0.0242g

**Extraction date:**  
 03/21/23 18:13:27

**Extracted by:**  
 850

**Analysis Method :** SOP.T.40.041.FL

**Analytical Batch :** DA057654SOL

**Instrument Used :** DA-GCMS-003

**Running on :** 03/22/23 15:34:06

**Reviewed On :** 03/22/23 16:07:38

**Batch Date :** 03/21/23 14:38:03

**Dilution :** 1

**Reagent :** 030420.09

**Consumables :** 27296; G201.062

**Pipette :** DA-309 25uL Syringe 35028

Residual solvents analysis is performed utilizing Gas Chromatography Mass Spectrometry in accordance with F.S. Rule 64ER20-39.



# Certificate of Analysis

**PASSED**
**FLUENT**

 82 NE 26th street  
 Miami, FL, 33137, US  
**Telephone:** (305) 900-6266  
**Email:** Taylor.Jones@getfluent.com

**Sample :** DA30321002-003

**Harvest/Lot ID:** 2934 4046 7389 4006

**Batch# :** 2934 4046 7389 4006

**Sampled :** 03/20/23

**Ordered :** 03/20/23



**Sample Size Received :** 15.3 gram

**Total Amount :** 1357 units

**Completed :** 03/23/23 **Expires:** 03/23/24

**Sample Method :** SOP.T.20.010

Page 5 of 6

 <b>Microbial</b> <b>PASSED</b>						 <b>Mycotoxins</b> <b>PASSED</b>					
Analyte	LOD	Units	Result	Pass / Fail	Action Level	Analyte	LOD	Units	Result	Pass / Fail	Action Level
ESCHERICHIA COLI SHIGELLA SPP			Not Present	PASS		AFLATOXIN B2	0.002	ppm	ND	PASS	0.02
SALMONELLA SPECIFIC GENE			Not Present	PASS		AFLATOXIN B1	0.002	ppm	ND	PASS	0.02
ASPERGILLUS FLAVUS			Not Present	PASS		OCHRATOXIN A	0.002	ppm	ND	PASS	0.02
ASPERGILLUS FUMIGATUS			Not Present	PASS		AFLATOXIN G1	0.002	ppm	ND	PASS	0.02
ASPERGILLUS TERREUS			Not Present	PASS		AFLATOXIN G2	0.002	ppm	ND	PASS	0.02
ASPERGILLUS NIGER			Not Present	PASS							
TOTAL YEAST AND MOLD	10	CFU/g	<10	PASS	100000						
<b>Analyzed by:</b> 3621, 3390, 585, 1440 <b>Weight:</b> 1.1881g <b>Extraction date:</b> 03/21/23 11:12:57 <b>Extracted by:</b> 3336 <b>Analysis Method :</b> SOP.T.40.056C, SOP.T.40.058.FL, SOP.T.40.209.FL <b>Analytical Batch :</b> DA057616MIC <b>Reviewed On :</b> 03/22/23 15:27:16 <b>Instrument Used :</b> PathogenDx Scanner DA-111, Applied Biosystems Thermocycler DA-010, fisherbrand Isotemp Heat Block DA-020, fisherbrand Isotemp Heat Block DA-049, Fisher Scientific Isotemp Heat Block DA-021 <b>Running on :</b> 03/21/23 12:05:52 <b>Dilution :</b> N/A <b>Reagent :</b> 011223.50; 031423.R29; 072122.22 <b>Consumables :</b> 7558002055 <b>Pipette :</b> N/A						<b>Analyzed by:</b> 3379, 585, 1440 <b>Weight:</b> 0.2659g <b>Extraction date:</b> 03/21/23 13:29:30 <b>Extracted by:</b> 3379 <b>Analysis Method :</b> SOP.T.30.101.FL (Gainesville), SOP.T.40.101.FL (Gainesville), SOP.T.30.102.FL (Davie), SOP.T.40.102.FL (Davie) <b>Analytical Batch :</b> DA057628MYC <b>Instrument Used :</b> N/A <b>Running on :</b> 03/21/23 13:33:46 <b>Dilution :</b> 250 <b>Reagent :</b> 032023.R01; 032023.R03; 032023.R08; 032023.R04; 022123.R33; 031523.R01; 040521.11 <b>Consumables :</b> 6697075-02 <b>Pipette :</b> DA-093; DA-094; DA-219					
<b>Reviewed On :</b> 03/22/23 15:27:16 <b>Batch Date :</b> 03/21/23 07:55:32						<b>Reviewed On :</b> 03/22/23 10:01:56 <b>Batch Date :</b> 03/21/23 09:27:38					
Total yeast and mold testing is performed utilizing MPN and traditional culture based techniques in accordance with F.S. Rule 64ER20-39.						Mycotoxins testing utilizing Liquid Chromatography with Triple-Quadrupole Mass Spectrometry in accordance with F.S. Rule 64ER20-39.					


**Heavy Metals**
**PASSED**

Metal	LOD	Units	Result	Pass / Fail	Action Level
<b>TOTAL CONTAMINANT LOAD METALS</b>	0.11	ppm	ND	PASS	1.1
ARSENIC	0.02	ppm	ND	PASS	0.2
CADMIUM	0.02	ppm	ND	PASS	0.2
MERCURY	0.02	ppm	ND	PASS	0.2
LEAD	0.05	ppm	ND	PASS	0.5
<b>Analyzed by:</b> 1022, 585, 1440 <b>Weight:</b> 0.236g <b>Extraction date:</b> 03/21/23 10:37:14 <b>Extracted by:</b> 1022, 3619 <b>Analysis Method :</b> SOP.T.30.082.FL, SOP.T.40.082.FL <b>Analytical Batch :</b> DA057639HEA <b>Instrument Used :</b> DA-ICPMS-003 <b>Running on :</b> 03/21/23 13:20:06 <b>Dilution :</b> 50 <b>Reagent :</b> 031423.R28; 031423.R18; 031723.R22; 031523.R45; 031723.R20; 031723.R21; 030123.R46; 022323.R22; 020123.02 <b>Consumables :</b> 179436; 210508058; 12607-302CC-302 <b>Pipette :</b> DA-061; DA-216					

Heavy Metals analysis is performed using Inductively Coupled Plasma Mass Spectrometry in accordance with F.S. Rule 64ER20-39.



# Certificate of Analysis

**PASSED**
**FLUENT**

 82 NE 26th street  
 Miami, FL, 33137, US  
**Telephone:** (305) 900-6266  
**Email:** Taylor.Jones@getfluent.com

**Sample :** DA30321002-003

**Harvest/Lot ID:** 2934 4046 7389 4006

**Batch# :** 2934 4046 7389 4006

**Sampled :** 03/20/23

**Ordered :** 03/20/23

**Sample Size Received :** 15.3 gram

**Total Amount :** 1357 units

**Completed :** 03/23/23 **Expires:** 03/23/24

**Sample Method :** SOP.T.20.010

Page 6 of 6



## Filth/Foreign Material

**PASSED**

Analyte	LOD	Units	Result	P/F	Action Level
Filth and Foreign Material	0.1	%	ND	PASS	1

<b>Analyzed by:</b> 1879, 1440	<b>Weight:</b> NA	<b>Extraction date:</b> N/A	<b>Extracted by:</b> N/A
-----------------------------------	----------------------	--------------------------------	-----------------------------

**Analysis Method :** SOP.T.40.090

**Analytical Batch :** DA057711FIL

**Instrument Used :** Filth/Foreign Material Microscope

**Running on :** 03/22/23 18:45:39

**Reviewed On :** 03/22/23 19:01:46

**Batch Date :** 03/22/23 18:38:59

**Dilution :** N/A

**Reagent :** N/A

**Consumables :** N/A

**Pipette :** N/A

Filth and foreign material inspection is performed by visual inspection utilizing naked eye and microscope technologies in accordance with F.S. Rule 64ER20-39.



## Water Activity

**PASSED**

Analyte	LOD	Units	Result	P/F	Action Level
Water Activity	0.01	aw	0.443	PASS	0.85

<b>Analyzed by:</b> 2926, 585, 1440	<b>Weight:</b> 0.566g	<b>Extraction date:</b> 03/21/23 14:28:15	<b>Extracted by:</b> 2926
--	--------------------------	--	------------------------------

**Analysis Method :** SOP.T.40.019

**Analytical Batch :** DA057649WAT

**Instrument Used :** DA-028 Rotronic HygroPalm

**Running on :** 03/21/23 14:23:53

**Reviewed On :** 03/21/23 14:44:03

**Batch Date :** 03/21/23 11:26:14

**Dilution :** N/A

**Reagent :** 100522.09

**Consumables :** PS-14

**Pipette :** N/A

Water Activity is performed using a Rotronic HygroPalm HP 23-AW in accordance with F.S. Rule 64ER20-39.